## 1. Set the start voltage:

Normal display voltage state, press to a starting voltage button ,to display the start charging voltage. long Press the start button, digital flashes, by start and stop button, set the start charging voltage value.

## 2. Set Stop voltage:

Normal Voltage normal display mode, press to a Stop voltage button ,to display the Stop charging voltage. long Press the Stop button, digital flashes, by start and stop button, set the Stop charging voltage value.

## 3. Setting Error:

Energized state while holding down the start / stop button, digital display 888, which is the factory setting.